

INTERNATIONAL STANDARD

ISO
4266-1

First edition
2002-11-15

Petroleum and liquid petroleum products — Measurement of level and temperature in storage tanks by automatic methods —

Part 1: Measurement of level in atmospheric tanks

Pétrole et produits pétroliers liquides — Mesurage du niveau et de la température dans les réservoirs de stockage par méthodes automatiques —

Partie 1: Mesurage du niveau dans les réservoirs à pression atmosphérique

PDF disclaimer

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.

© ISO 2002

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Case postale 56 • CH-1211 Geneva 20
Tel. + 41 22 749 0111
Fax + 41 22 749 09 47
E-mail copyright@iso.ch
Web www.iso.ch

Printed in Switzerland

Contents

	Page
1 Scope	1
2 Normative references	1
3 Terms and definitions	1
4 Precautions	3
4.1 Safety precautions	3
4.2 Equipment precautions	3
4.3 General precautions	3
5 Accuracy	4
5.1 Intrinsic error of ALGs	4
5.2 Calibration prior to installation	4
5.3 Error caused by installation and operating conditions	4
5.4 Overall accuracy	4
5.4.1 General	4
5.4.2 Use of ALGs for fiscal /custody transfer purposes	5
6 Installation of ALGs	5
6.1 General	5
6.2 Mounting location	5
6.3 Manufacturer's requirements	5
6.4 Installation	5
6.5 Still-well design	11
7 Initial setting and initial verification of ALGs in the field	11
7.1 Introduction	11
7.2 General precautions	12
7.2.1 Initial requirements	12
7.2.2 Manual reference level measurement procedure	12
7.2.3 Reference measurement tape and weight certification	12
7.2.4 Effect of weather	12
7.2.5 ALG technology-specific considerations	12
7.2.6 Application-specific considerations	12
7.3 Initial settings of ALGs	13
7.3.1 Setting against manual reference ullage measurements	13
7.3.2 Setting against manual reference dip (innage) measurements	13
7.4 Initial verification	14
7.4.1 Introduction	14
7.4.2 Verification conditions	15
7.4.3 Initial verification procedures	15
7.5 Record keeping	16
8 Subsequent verification of ALGs	17
8.1 General	17