
**Petroleum and liquid petroleum products —
Measurement of level and temperature in
storage tanks by automatic methods —**

**Part 4:
Measurement of temperature in
atmospheric tanks**

*Pétrole et produits pétroliers liquides — Mesurage du niveau et de la
température dans les réservoirs de stockage par méthodes automatiques —*

*Partie 4: Mesurage de la température dans les réservoirs à pression
atmosphérique*

PDF disclaimer

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.

© ISO 2002

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Case postale 56 • CH-1211 Geneva 20
Tel. + 41 22 749 01 11
Fax + 41 22 749 09 47
E-mail copyright@iso.ch
Web www.iso.ch

Printed in Switzerland

Contents

	Page
1 Scope	1
2 Normative references	1
3 Terms and definitions	1
4 Precautions	2
4.1 Safety precautions	2
4.2 Equipment precautions	2
4.3 General precautions	3
5 Accuracy	3
5.1 General	3
5.2 Intrinsic error of ATTs	3
5.3 Calibration prior to installation	3
5.3.1 General	3
5.3.2 ATT calibrated as a system	4
5.3.3 ATT calibrated by components	4
5.3.4 Multiple-point ATTs	4
5.3.5 Variable-length ATTs	4
5.3.6 Uncertainty of the reference	4
5.4 Error caused by installation and operating conditions	4
5.5 Overall accuracy	5
5.5.1 General	5
5.5.2 Use of ATT for fiscal/custody transfer purposes	5
6 Selection of ATTs	5
6.1 General	5
6.2 ATTs for fiscal/custody transfer purposes	6
7 Description of ATT equipment	6
7.1 Introduction	6
7.2 Electrical temperature elements	6
7.2.1 Resistance temperature detectors	6
7.2.2 Other temperature elements	7
8 Installation of ATTs	7
8.1 General	7
8.2 Single-point (spot) temperature elements	7
8.3 Averaging temperature elements	7
8.3.1 General	7
8.3.2 Upper, middle and lower temperature elements	7
8.3.3 Multiple-point temperature elements	8
8.3.4 Variable-length RTD temperature elements	8
8.3.5 Mid-level temperature element	8
8.3.6 Moveable spot temperature element	8