



BSI Standards Publication

**Installation and maintenance of gas-fired ducted air heaters of rated heat input not exceeding 70 kW net (2nd and 3rd family gases) – Specification**

**Publishing and copyright information**

The BSI copyright notice displayed in this document indicates when the document was last issued.

© The British Standards Institution 2019

Published by BSI Standards Limited 2019

ISBN 978 0 539 00422 9

ICS 97.100.20

The following BSI references relate to the work on this document:

Committee reference GSE/30

Draft for comment 18/30375326 DC

**Amendments/corrigenda issued since publication**

Date	Text affected
------	---------------

---

# Contents

	<b>Page</b>
<b>Foreword</b>	<b>ii</b>
1 Scope	1
2 Normative references	1
3 Terms and definitions	2
4 Competence	4
<i>Table 1 — Approval bodies and statutory regulations by country/territory</i>	5
<i>Table 2 — Competence requirements by country/territory</i>	5
5 Environmental considerations	5
6 Selection of equipment and pre-installation	6
7 Installation	19
<i>Figure 1 — Typical installation where combustion air is supplied from a ventilated roof space</i>	20
<i>Figure 2 — Typical compartment installation of a down-flow fan-assisted ducted-air heater</i>	24
<i>Figure 3 — Airing cupboard partition and guard configuration</i>	26
<i>Figure 4 — Typical slot-fit installation</i>	27
<i>Figure 5 — Typical return air arrangements</i>	30
8 Post-installation	32
<b>Annex A</b> (informative) <b>Servicing and maintenance of convection chamber installations</b>	<b>35</b>
<b>Annex B</b> (normative) <b>Connection options for condensate and combined pressure relief valve/condensate discharge</b>	<b>36</b>
<i>Figure B.1 — Connection of condensate drainage pipe to internal soil and vent stack</i>	37
<i>Figure B.2 — Connection of a condensate drainage pipe downstream of a sink, basin, bath or shower waste trap</i>	40
<i>Figure B.3 — Connection of a condensate drainage pipe upstream of a sink, basin, bath or shower waste trap</i>	41
<i>Figure B.4 — Connection of condensate drainage pipe to external soil and vent stack</i>	42
<i>Figure B.5 — External drain, gully or rainwater hopper</i>	43
<i>Figure B.6 — External termination to rainwater downpipe</i>	44
<i>Figure B.7 — Example of a purpose made soakaway</i>	46
<b>Annex C</b> (informative) <b>Checking the condition of the heat exchanger of open-flued heaters</b>	<b>47</b>
<b>Annex D</b> (informative) <b>Setting up the fan assisted provision of combustion air</b>	<b>48</b>
<b>Bibliography</b>	<b>49</b>

## Summary of pages

This document comprises a front cover, and inside front cover, pages i to iv, pages 1 to 51, an inside back cover and a back cover.