
**Road vehicles — Durability test
method of starter relay for stop and
start system**

*Véhicules routiers — Méthodes de test d'endurance pour le relais
démarrreur stop and start system*





COPYRIGHT PROTECTED DOCUMENT

© ISO 2019

All rights reserved. Unless otherwise specified, or required in the context of its implementation, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
CP 401 • Ch. de Blandonnet 8
CH-1214 Vernier, Geneva
Phone: +41 22 749 01 11
Fax: +41 22 749 09 47
Email: copyright@iso.org
Website: www.iso.org

Published in Switzerland

Contents

	Page
Foreword	iv
Introduction	v
1 Scope	1
2 Normative references	1
3 Terms and definitions	1
4 Structure of starting circuit	1
5 Types of starter solenoid	2
6 Test methods	2
6.1 Test method of the starter relay for the single-coil solenoid	2
6.1.1 General.....	2
6.1.2 Test circuit.....	2
6.1.3 Test conditions.....	3
6.2 Test method of the starter relay for the double-coil solenoid.....	4
6.2.1 General.....	4
6.2.2 Test circuit.....	4
6.2.3 Test conditions.....	4
6.3 Number of operation cycles and characteristics of the relay after the test.....	8
Bibliography	9